


Google Android Installation Guide

Preparing the Installation Files

- Visit <http://www.hdx1080.com/download>
 - Go to HDX Bone section, Google Android Section.
 - Download according to the release dates, whichever is the latest.
- Extract the downloaded file and copy to the updating source.
 - Make sure that your archive utility does not continue to extract the file! The end result should be a filename without extension. For example, HDXV012_android_20100428-103404 instead of a directory!

The HDX Bone is able to detect sources from the internal HDD or a thumb drive connected via a USB mini-b to type A female connector, as shown below.

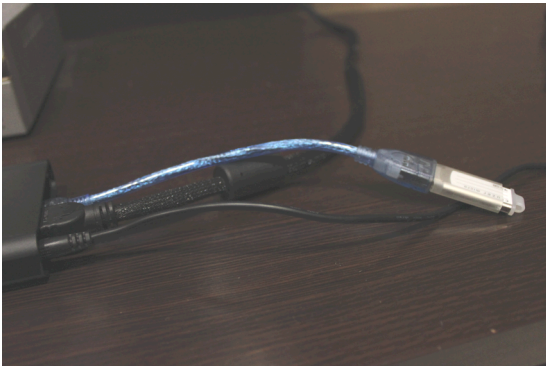

Source: HDD


- Prepare a primary EXT3 partition and a NTFS partition in your HDD. We recommend at least 10% of the HDD capacity for EXT3, this will ensure sufficient space for your needs.
- If you are unsure how to create a EXT3 partition, please download this free program Partition Wizard (<http://www.partitionwizard.com/free-partition-manager.html>)
- Copy the android installation file into the ROOT directory of your **NTFS** formatted partition.

Source: USB Thumb Drive

- No EXT3 partition required, as the installation file is able to partition automatically for you if you are using the thumb drive upgrade method.
- The setup wizard will automatically, create a EXT3 partition for the android installation, we do recommend that you back up any data in your HDD to prevent any unforeseeable circumstances which is unlikely.
- Copy the android installation file into the ROOT directory of your thumb drive.
- Connect the thumb drive to the mini-b to type A converter and hook it up to the bone before plugging in the power cable.

How to install Android


- Turn on your HDX Bone, and navigate to SETUP page as shown below and select the system icon.

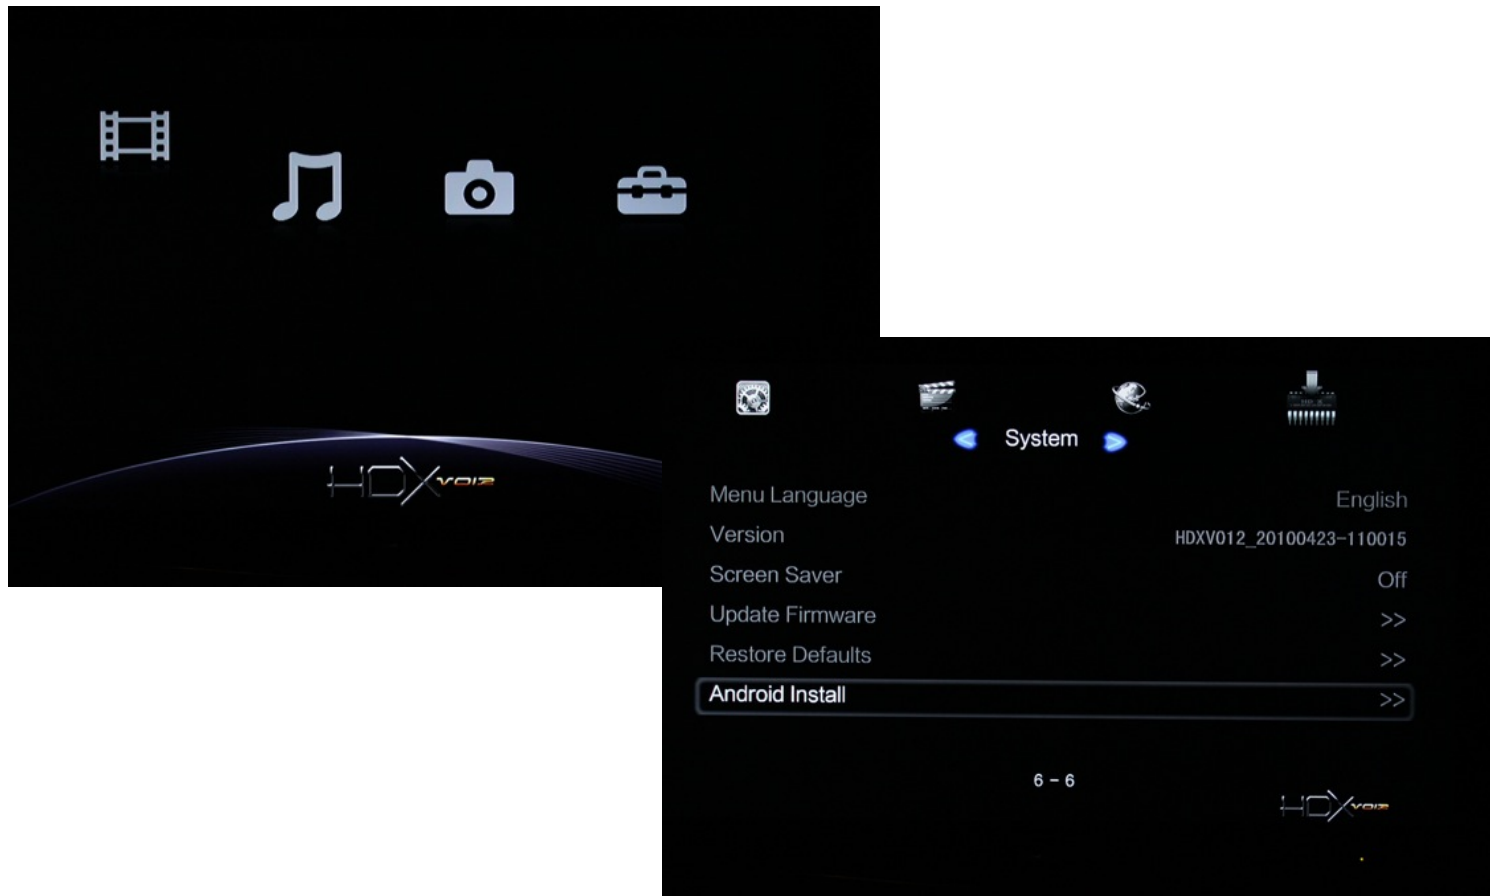

- Proceed to Android Install, and press PLAY button on your remote

How to install Android

- Confirmation? Press PLAY button to proceed.

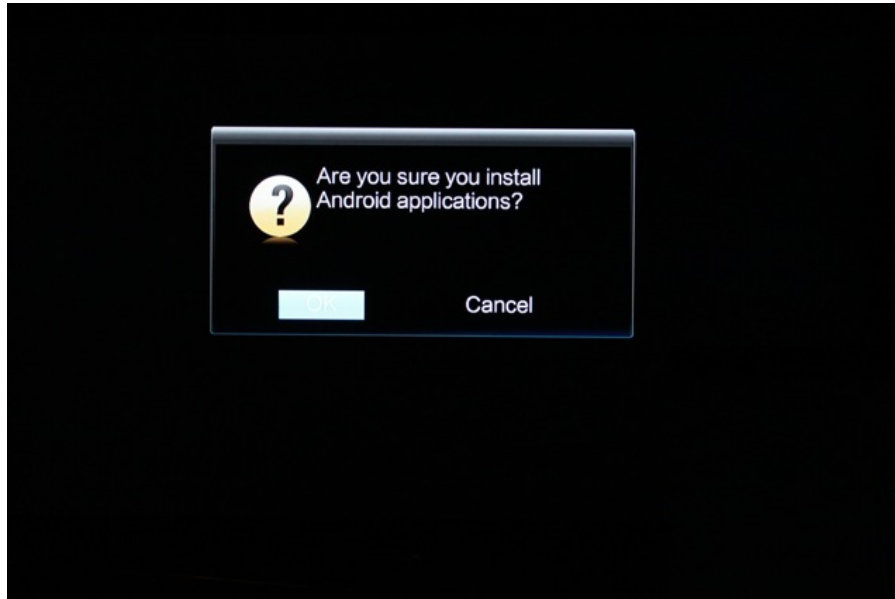

How to install Android


- In approximately, 5mins the installation will complete. A short prompt will appear to notify you that installation process is completed. You will be returned to the setup page.



- Cycle the power by pressing the power button on your remote.

How to install Android

- Select Android OS, you have 5sec before the system automatically boot to HDX Voir.

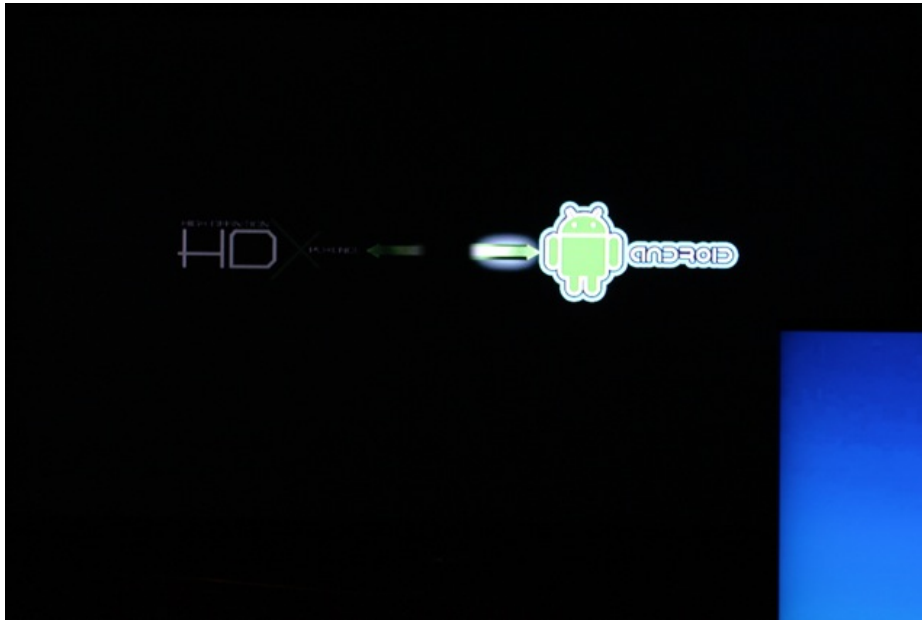

- If you see the snow mountain, your android is successfully installed.



Important and Disclaimer

- Please do not power-off the HDX Bone during the upgrading process, this may cost your unit to be faulty.
- This guide is edited and checked for errors, however we reserved the right to make any changes without due notice and we are not responsible for any failure to your devices, as interpretation may varies.
- Please back up all files when attempting a any upgrade, although there are no experience with data-looses during upgrading, however its better to be safe than sorry.
- Remember to subscribe to our newsletter from <http://www.hdx1080.com> for any firmware update notification.

Thank you for your support!